 


SACK it[®]
DARE YOURSELF

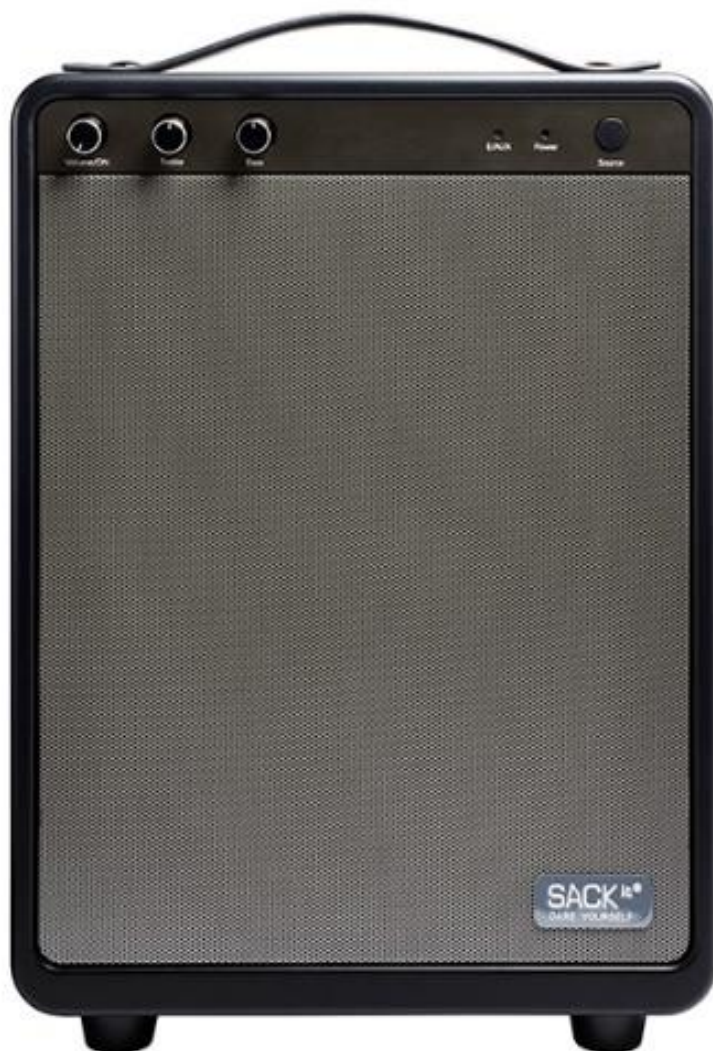

BOOMit

User Manual - English

Thank you!

Thank you for purchasing this BOOMit high power portable design speaker from SACKit. Please read the entire user manual before using the product and save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions regarding technical problems, please contact our customer services on info@sackit.dk. We hope you will enjoy your new BOOMit speaker.

CONTENT

BOX CONTENTS	4
SAFETY INFORMATION.....	4
PRODUCT DESCRIPTION	6
QUICK START GUIDE	8
BATTERY AND CHARGING.....	8
BLUETOOTH CONNECTION	9
CONNECT TWO BOOMit IN WIRELESS STEREO	9
LINE IN MODE.....	9
CONNECT TWO BOOMit with LINE IN.....	10
POWER BANK FUNCTION	10
CLEANING THE SPEAKER.....	10
SPECIFICATIONS.....	11
TROUBLESHOOTING	11

CONGRATULATIONS on your new SACKit product!

Register your new SACKit product and get cool benefits.

1. Go to www.sackit.eu/reg
2. Enter name, e-mail, and product.

BOX CONTENTS

1. BOOMit speaker
2. Quick start guide
3. AC power adapter

SAFETY INFORMATION


Product malfunctions due to incorrect use of the product is not covered by the warranty. **WARNING:** To avoid fire, injuries or electrocution please follow the instructions.

- You are not allowed to open the product or replace parts of the unit. Contact a qualified service center if the product malfunctions.
- Do not subject the speaker to wet, moist or excessively dusty environments, as this may cause damage.
- Never use abrasive cleaners or chemical solvents as this can damage the product.
- Do not expose the product to excessive heat, sunshine, flames or similar.
- Do not place lit candles or open flames on the product.
- Do not use excessive force or violence when operating the buttons and dials of the speaker.
- Do not place the product in a confined space during use, make sure there is ample air around it.
- If the product has been stored in a cold location, please allow it to reach room temperature before connecting it to a power source.
- If disposing of the product, please obey local rules and regulations. The product contains electronic components and batteries and must be disposed of responsibly to avoid negative consequences to the

environment.

PRODUCT DESCRIPTION

Front:

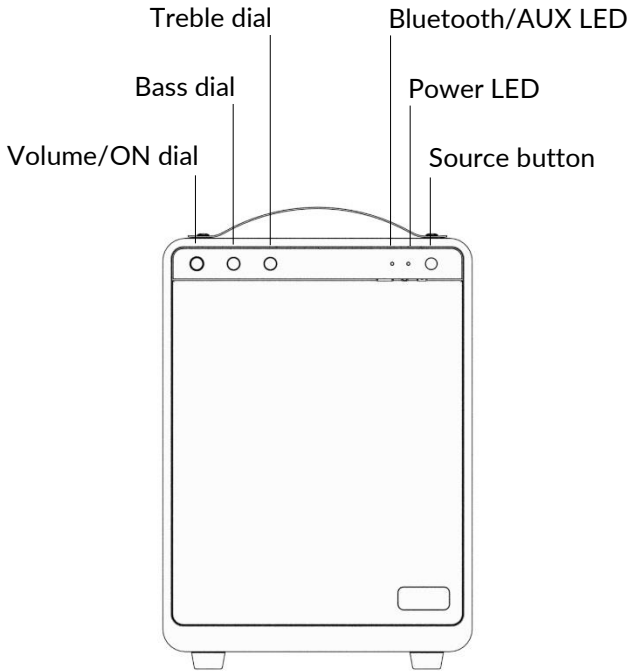


- Volume/ON dial: Switch speaker on/off and control volume. Turning clockwise increases volume and vice versa.
- Bass dial for controlling bass level. Recommended start setting is with indicator facing upwards.
- Treble dial for controlling treble level. Recommended start setting is with indicator facing upwards.
- Bluetooth/AUX LED. Blue blinking = searching for Bluetooth unit. Blue constant light = connected to Bluetooth unit. Green constant light = receiving line in signal through 'Line in/out'.
- Power LED. When charging:
 - Constant red light = charging.
 - No light = Unit turned on, unit turned off or no charging of

batteries.

- Dimmed red light = Low power, please recharge.
- Source button.
 - Single press = Switch between 'Line in' and 'Bluetooth' input. The speaker will always turn on at the latest setting, and if it was Bluetooth, it will connect to the latest device.
 - Double click = Disconnect connected device.
 - Long press (3 seconds) = Connect to another BOOMit in wireless stereo. If connected already and you long press 'Source' you will disconnect the other BOOMit.

Rear:

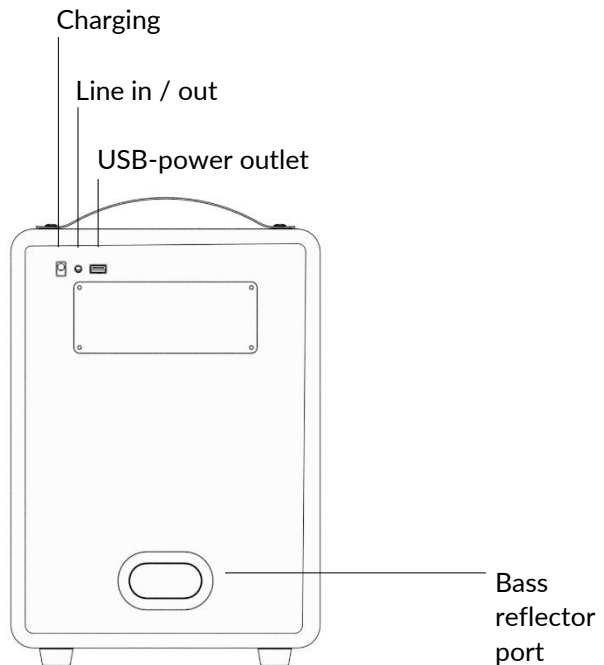

- Charging plug: Connector for charging your speaker. Always use the supplied charger.

- Lin in / out: Mini-jack connector. Use this dual function connector for:
 - When in Bluetooth mode, use this to transfer the speakers signal to other units by cable.
 - When in AUX mode, use this to receive signal from another unit.
 - Note: Can be used to connect two BOOMit with a mini-jack connector.
- USB-power outlet. Use this port for charging your phone or similar with the large internal battery.
- Bass reflector port for increase bass. Do not block or fill the port as this will impact the sound quality.

QUICK START GUIDE

- Connect the speaker to a power source and charge at least 6 hours to obtain full battery capacity.
- Turn on speaker by turning the Volume/ON button clockwise.
- Turn on Bluetooth on the device you want to connect.
- Choose "BOOMit" in the Bluetooth settings on your device. Enter pin '0000' if asked.
- Start playing music from your device.
- To disconnect the existing device connected to your BOOMit double click "Source" button.

BATTERY AND CHARGING

Please use the adaptor supplied with BOOMit for charging, the adaptor power is 15V/2A. Do not use any other power adaptor.

- Before use you should charge the speaker for at least 6 hours to obtain full battery capacity.
- If the speaker is fully discharged it will take 3 hours to fully charge the internal battery.
- When charging the power led will illuminate and will turn off when

fully charged.

- Please remember to shut off the speaker when not in use.

BLUETOOTH CONNECTION

- Turn on speaker by turning the Volume/ON button clockwise.
- Turn on Bluetooth on the device you want to connect.
- Choose “BOOMit” in the Bluetooth settings on your device. Enter pin ‘0000’ if asked.
- Start playing music from your device.
- To disconnect the existing device connected to your BOOMit double click “Source”.
- If you have two BOOMit connected in wireless stereo, you need to disconnect the second speaker before you will be able to disconnect your device.

CONNECT TWO BOOMit IN WIRELESS STEREO

It is possible to create a stereo pair between two BOOMit speakers.

- Turn on one speaker and connect to it to your phone or other device with Bluetooth, this BOOMit will be the left speaker in the stereo setup.
- Turn on the second BOOMit.
- Press and hold the “Source” button on the first BOOMit until you hear a sound and the LED on both BOOMit turns blue.
- The two BOOMit are now paired in stereo.
- To disconnect the paired BOOMit, press and hold the “Source” button on any of the BOOMit until you hear a sound and the “Source LED” on the second BOOMit begins to blink.

LINE IN MODE

Connecting the speaker to another unit using line in.

- Connect a mini jack connector (not included) first to the source

then to your BOOMit.

- Turn on your speaker by turning the volume button.
- If the 'AUX/Bluetooth' LED is bright blue (indicating Bluetooth connection), press the 'source' button once and the 'source LED' will go from blue to green (indicating line in mode).

CONNECT TWO BOOMit with LINE IN

Two BOOMit can be connected through AUX / line in. If connected with another BOOMit the second one will replicate the output for double effect.

- Connect the first BOOMit with a device through Bluetooth.
- Insert the AUX cable in the first BOOMit.
- Turn on the second BOOMit and press the "Source" button until Bluetooth/AUX led turns green.
- Plug in AUX cable in second BOOMit, and turn up the volume to max.

This function allows you to connect up to four BOOMit together. First pair two BOOMit with Bluetooth, then connect each of those BOOMit to another set of BOOMit using the line in method described above.

POWER BANK FUNCTION

- Turn on BOOMit
- Use a compatible USB cable and connect to your device you wish to charge.
- Max output is 5V/1.5A.

CLEANING THE SPEAKER

1. Please turn off the speaker before cleaning.
2. Use only water and a mild detergent on a damp cotton or microfibre cloth for cleaning the speaker.
3. Do not use any solvents or similar to avoid damaging the surface.
4. During cleaning please take extra care not to spill water in any of the

connectors.

SPECIFICATIONS

Product size: 268 x 190 x 370mm

Bluetooth: 5.0

Bluetooth working range : Over 10m

Power input :DC 15V/2A

Output – bass: 30W

Output – treble: 2 x 10W

Output – USB power bank: 5V/1.5A

Frequency response: 18-20KHz

Battery: Li-ion, 6600mAh, up to 6 hours streaming at 75-100% volume.

Amplifier: Class D

Product: 4.8 kg

TROUBLESHOOTING

No sound

1. Please check if the speaker is charged or connected to power
2. Try to increase volume in the 'Volume/ON' dial. You increase volume by turning clockwise.
3. Try to turn up volume on the device connected to the speaker.
4. If connected by line in, please check if mini jack is properly inserted.

No charging

1. Please check if charger is fully connected.

Failed Bluetooth connection

1. Please check if speaker is in pairing mode (blinking 'AUX/Bluetooth' LED).

2. If you are not in pairing mode, double click the source button as this will disconnect any unit and start pairing again.
3. The units must be within 8 meters of each other.

Cannot disconnect from Bluetooth device

1. If two BOOMit are connected in wireless stereo, you cannot disconnect your device through the speaker controls. Disconnects the second BOOMit by pressing and holding 'Source' on the second BOOMit. When this is disconnected, you can disconnect the first BOOMit from your device.

SACK it[®]
DARE YOURSELF