

USER MANUAL

MOVEit Wi-Fi & Bluetooth






THANK YOU!

Thank you for choosing the MOVEit multi-room speaker from SACKit. Please read this user manual carefully before using your new speaker. We are not responsible for damage caused by failure to comply with the instructions or irresponsible use of the product. If you have any questions regarding technical problems, please contact our customer services. We hope you will enjoy your new multi-functional MOVEit speaker.



CONTENTS

Page 3	Quick start guide
Page 3	Box contents
Page 3	Battery
Page 4	Wi-Fi connection and the "SACKit Player" app
Page 6	Play music – Wi-Fi mode
Page 6	Multi-room system
Page 8	Change between Wi-Fi and Bluetooth mode
Page 8	Bluetooth connection
Page 8	Play music - Bluetooth mode
Page 9	Line-in mode
Page 9	Phone charging
Page 9	Reset the speaker
Page 10	Updates
Page 10	Change the front
Page 10	Trouble shooting
Page 11	Important safety information
Page 12	Cleaning the speaker
Page 13	Technical specifications

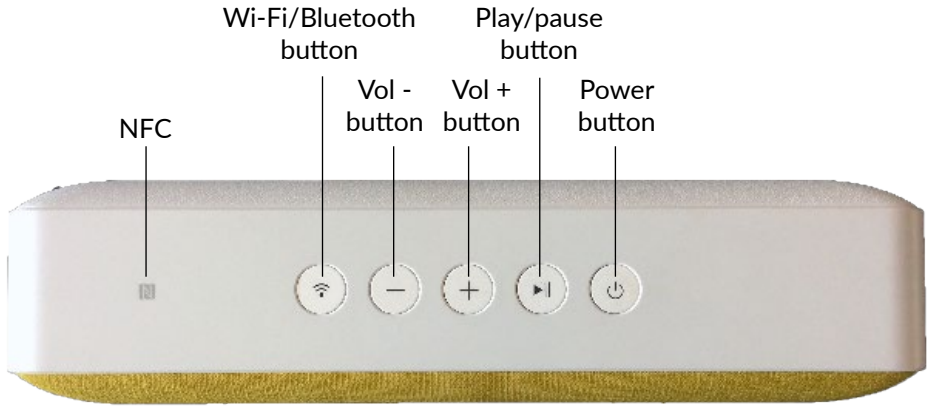

QUICK START GUIDE

1. Charge the speaker for at least 4 hours
2. Download the free app “SACKit Player” from App Store or Google Play
3. Turn on the speaker by pressing the Power button
4. Follow the instructions in the app
5. The speakers WLAN password is ‘SACKit12’. You are advised to change to your own password afterwards.

BOX CONTENTS

1xMOVEit Wi-Fi & Bluetooth speaker

1xAC/DC adapter for charging (3 different adapter plugs included)

1x3.5mm audio cable

1xAttached MOVEit Front in the color Dusty Blue

BATTERY AND CHARGING

- Battery: Rechargeable Lithium battery, 2200 mAh, 11,1V
- Charging: Please use the included adapter for charging the speaker using the DC IN input on the back of the MOVEit speaker. You will find included three different adapter plugs for different power outlets around the world. Please change this plug according to your power outlet.
- Duration of charging: Please make sure that the battery is fully charged before the first use of the MOVEit speaker. Charging the battery fully takes approximately 4 hours. The “Power” button will light up red while the battery is charging.
- Change between stationary use and portable use: Use the speaker either while connected to a power outlet or when playing from battery.
- Low battery: When battery is low, the speaker will issue the warning sound “Low battery” and the “Power” button will flash red. You will hear the low battery warning when battery has 10% left.
- The speaker will automatically turn off after 15 minutes, if the speaker is not used.
- Standby mode. The speaker is in standby mode when it is turned off, but plugged into a power outlet. When in standby mode the speaker will automatically turn on when you start playing music from the SACKit Player app.

Wi-Fi CONNECTION

Connect MOVEit to your Wi-Fi network to control it through the “SACKit Player” app. If you have more than one MOVEit Wi-Fi speaker, you will be able to control the multi-room feature from the SACKit Player app. Please note: Your phone/tablet and the MOVEit speaker must be connected to the same Wi-Fi network.

Download the “SACKit Player” app from App Store or Google Play – it’s free.

First connection of MOVEit to a new Wi-Fi network

Follow the instructions in the SACKit Player app or use the following guide. If you wish to connect more than one speaker to your Wi-Fi network at the same time, please connect them one at a time. To connect the speakers to your Wi-Fi network you need the Wi-Fi password. Please find your Wi-Fi password before connecting.

1. Download the free “SACKit Player” app from App Store or Google Play
2. Connect your phone or tablet to the same Wi-Fi network that you wish to connect the MOVEit speaker to
3. Turn on the MOVEit speaker by long pressing the “Power” button
4. When you have turned on the speaker, you will hear the warning sound “Wi-Fi mode”. If the speaker unexpectedly issues the warning sound “Bluetooth mode”, please change mode. Change mode by single pressing the “Wi-Fi/Bluetooth” button
5. Go to your SACKit Player app. The app will automatically search for available MOVEit speakers
6. Press Wi-Fi setup Wizard in the SACKit Player app
7. Choose the Wi-Fi network you wish to connect to and enter the password for your Wi-Fi network. Press next in the SACKit Player app
8. Long press the “Wi-Fi/Bluetooth” button for 5 seconds until flashing fast. When the button is flashing fast, the speaker is in pairing mode. Press next in your SACKit Player app
9. Please wait while the speaker is connecting. This usually takes 60 seconds. When successfully connected, you will hear the warning sound “Connected”.

If connection fails, please make sure:

1. That you have entered the correct password for your Wi-Fi network
2. That the MOVEit speaker and your device is fully charged

3. That you are within 2 meter range of your router when trying to connect

If this is not the problem, please try to connecting though the alternative way to setup:

Alternative way to setup – connect to Wi-Fi

You may experience disruptions of the network, which prevents MOVEit from connecting to the network using the above set up. Try the set up again or use the following alternative way to set up.

1. Click “Alternative way to set up” in your SACKit Player app
2. Go to the Wi-Fi settings of your phone or tablet
3. Choose the MOVEit speaker from available Wi-Fi networks
4. Return to the SACKit Player app
5. Choose the Wi-Fi network, you wish to connect to, and enter the Wi-Fi password
6. When successfully connected, you will hear the warning sound “Connected”

Using MOVEit after first connection to your Wi-Fi network

When MOVEit is successfully connected to your Wi-Fi network, you will be able to control it from every smartphone or tablet connected to the same Wi-Fi. All you need to do, is turn on the speaker(s), and you are ready to enjoy the sweet tunes. Please note: You may have to wait up to 60 seconds while the SACKit Player app is searching for the MOVEit speakers connected to your Wi-Fi.

Add password to the MOVEit Wi-Fi network

Every MOVEit speaker has an individual network. You can use this network when connecting to your home Wi-Fi (see section “Alternative way to setup – connect to Wi-Fi”). We recommend that you add a password to the MOVEit Wi-Fi network:

- Open your SACKit Player app
- Go to device list and choose the device that you wish to add a password to
- Press “settings” (the cogwheel in the top right corner)
- Choose speaker info
- Turn device password on
- Create your own personal password

PLAY MUSIC – WI-FI MODE

Wi-Fi mode lets you play music from the SACKit Player app. Through the app, you have access to your music library, TuneIn, iHeartRadio, Spotify Connect etc. Furthermore, it is possible to play music using AirPlay.

Control your music via the on-speaker controls:

- Adjust volume: short press or long press "Vol-" and "Vol+" buttons to adjust volume.
- Next/previous number: Double-click the "Vol+" or "Vol-" to change to next or previous song
- Play/pause: Pause or play your music directly on the speaker by pressing the "Play/Pause" button

MULTI-ROOM FEATURE

Connect more speakers to your Wi-Fi network and use them as a multi-room speaker system. It is possible to connect up to six speakers to your Wi-Fi network, depending on the network speed. Listen to the same song in every room or play different songs in different rooms.

Multi mode

Multi mode lets you connect more speakers to play the same music. The sound is perfectly synchronized in order for you to cover your home in great music. Multi mode problems: If you experience problems playing in multi mode, please try disconnecting the speakers (into solo mode), and reconnect them into multi mode (see guide on facing page). Sometimes problems occur if one of the speakers runs out of power.

Solo mode

When speakers are in solo mode, you will be able to play different music on every speaker.

Change between multi mode and solo mode

Use the SACKit Player to change between multi and solo mode (see picture on facing page). It takes up to 30 seconds to change between multi mode and solo mode. Please note: You may experience disruptions in the music, if the Wi-Fi signal is poor.



CHANGE BETWEEN WI-FI AND BLUETOOTH MODE

Change between Wi-Fi and Bluetooth mode by pressing the “Wi-Fi/Bluetooth” button at the MOVEit speaker. The warning sound lets you know in which mode the speaker is. If you are playing music from the speaker, when you wish to change mode, please pause the music before changing.

Use the Bluetooth connection when you do not have access to Wi-Fi – for example in the park, at the porch or when you’re on vacation. Please note: it is not possible to connect more MOVEit speakers into a multi-room system, when playing from Bluetooth mode.

BLUETOOTH CONNECTION

1. Turn on the MOVEit speaker by long pressing the “Power” button
2. Press the “Wi-Fi/Bluetooth” button to change from Wi-Fi mode to Bluetooth mode. The warning sound lets you know in which mode the speaker is.
3. The speaker is in pairing mode when the “Wi-Fi/Bluetooth” button is flashing, and you hear the warning sound “waiting for connection”
4. Go to the Bluetooth settings on your device and choose “MOVEit”. When your device is successfully connected to the speaker, you will hear the warning sound “Connected”
5. Put on your favorite song and dance

When your device is successfully paired to the speaker, it will automatically connect the next time you turn on the speaker.

Disconnect Bluetooth

If you wish to connect another Bluetooth device to the MOVEit speaker, please long press the “Wi-Fi/Bluetooth” button to reset the Bluetooth pairing. The speaker is automatically in pairing mode, and you will be able to connect a new Bluetooth device.

PLAY MUSIC – BLUETOOTH MODE

Control your music via the on-speaker controls:

- Adjust volume: short press or long press “Vol-” and “Vol+” buttons to adjust volume.
- Next/previous number: Double-click the “Vol+” or “Vol-” to change to next or previous song
- Play/pause: Pause or play your music directly on the speaker by pressing the “Play/Pause” button

LINE-IN MODE

Play music via the included audio cable by plugging it into the LINE IN input on the back of the MOVEit speaker and into your device. The MOVEit speaker will automatically change to Line-in mode when you plug the audio cable into the speaker.

Control your music via the on-speaker controls:

- Adjust volume: short press or long press "Vol-" and "Vol+" buttons to adjust volume.
- Mute: Stop playing music from the speaker by pressing the "Play/Pause" button

PHONE CHARGING

You can charge your phone from the USB port on the back of the MOVEit speaker. All you need to do is connect the speaker and your phone via a USB charging cable (not included), and your phone will automatically start charging. If charging does not automatically start, please press the "Power" button. The USB port is designed for charging mobile devices only. It supplies 5V DC at a charging current of up to 1000 mA.

Please note: Charging your phone will reduce battery life if the speaker is not plugged into a power outlet.

RESET

Reset the Wi-Fi settings

Reset all Wi-Fi settings by entering the following combination of buttons on the MOVEit speaker:

"Play/pause button", "Vol+ button", "Power button", "Play/Pause button" and "Power button"

The speaker will turn off when you have entered the above combination of buttons. Turn on the speaker again and connect to Wi-Fi.

Reset the buttons on the speaker

You can reset the buttons on the speaker if you experience problems operating them. The buttons are reset using the "Reset" button on the back of the speaker. Please use a toothpick or a needle to press the reset hole. This will turn off the speaker. Please turn it on again to continue operating the speaker.

UPDATES

We keep improving your speaker system with timely updates. It's important that you always run the updates for your speakers. You will see a notification with the text "new" in your "device list" in the SACKit Player app when a new update is available. You will automatically be notified in the app, when a new update is ready – always accept the new updates. If you have more than one speaker, you will have to update each speaker individually.

CHANGING THE FRONT

Change up the look of your speaker with the changeable front – do you want it classic chic, matching the color of your sofa or should it pop with an eye-catching color? It's up to you!

1. Remove the front by pulling the SACKit leather label. When you have loosen the corner of the front, you will be able to loosen the front all the way around the edges and finally remove it completely. Please note: The front is attached thoroughly to ensure sublime sound quality. The leather label is fastened with screws, and it is designed for using when removing the front.
2. Attach the new front by placing the "sticks" into the matching holes. Press the front onto the speaker all the way around the edges - and your new look it ready!

TROUBLE SHOOTING

No sound from the speaker

1. Please make sure that the speaker is charged or plugged into a power outlet
2. Try increasing the volume on your device and the MOVEit speaker
3. Try changing between Wi-Fi and Bluetooth mode to make sure that the speaker is in correct mode. Change between Wi-Fi and Bluetooth mode by pressing the "Wi-Fi/Bluetooth" button
4. Please make sure that all cables are connected correct if playing from Line-in mode

The speaker murmur

1. Please make sure that all cables are correctly connected
2. Please check the status of your Wi-Fi network. Disruptions or bad connection can cause murmur

No sound from the speaker when in Wi-Fi mode

1. Please make sure that your device and the MOVEit speaker are connected to the same Wi-Fi network
2. Please make sure that the MOVEit speaker is in Wi-Fi mode. Change between Wi-Fi and Bluetooth mode by pressing the “Wi-Fi/Bluetooth” button
3. If you are playing music from the SACKit Player app, please make sure that the sound is transmitted through the MOVEit speaker

I cannot operate the buttons on the speaker

1. You can reset the buttons on the speaker if you experience problems operating them. The buttons are reset using the “Reset” button on the back of the speaker. Please use a toothpick or a needle to press the reset hole.

I cannot connect MOVEit to Wi-Fi

1. Please make sure that you have entered the correct password to your Wi-Fi network
2. Please make sure that you are within 2 meters of your router when trying to connect
3. Please try to reset the Wi-Fi settings by entering the following combination of buttons on the MOVEit speaker: “Play/pause button”, “Vol+ button”, “Power button“, “Play/Pause button“ and “Power button“

IMPORTANT SAFETY INFORMATION

Please read the following information and operate the speaker and accessories accordingly to ensure correct and safe use of the product. We are not responsible for damage caused by failure to comply with the instructions or irresponsible use of the product.

Warning

To prevent any fires or electrical hazards please act according to the following guidelines:

- Do not disassemble or replace any parts of this device. Please contact professional maintenance or qualified service center if there is any damage to the device.
- Do not expose this device to rain, water or wet places. Do not place liquid containers (such as vases) on the product side.
- Do not place the speaker in or close to any liquid
- If any liquids flows inside the product, please shut down the product and contact customer service center
- Do not place this device in or close to sources of excessive heat or fire. (Such as: candles, fireplaces or direct sunlight)
- Please shut down the speaker in lightning weather
- Keep this device away from any heat source, dust and vibration.
- Be sure to place this device on stable, flat and level surfaces only.
- Do not use excessive force when using any of the control buttons.
- If the product is below 5°C when you receive it, please open the product packaging and wait for it to reach room temperature.
- To prevent overheating, please do not install the speaker in enclosed spaces. Be sure to set aside at least 10cm around the product for ventilation

Disposal of the product

MOVEit is made from recyclable and high quality materials. Do not dispose of the speaker together with other living garbage. Please understand the local classification about collecting electrical, electrical products that contains batteries. Correct disposal of the product will help to prevent negative impact to the environment.

CLEANING THE PRODUCT

If cleaning is required, use only a dry, soft cloth or a minimally damp cloth without any corrosive solvent or cleaning agent.

TECHNICAL SPECIFICATIONS

- Wi-Fi speaker
- Connect up to 6 speakers to your Wi-Fi network
- Bluetooth 4.0
- On-speaker controls
- Rechargeable Li-Ion battery, 2200mAh (up to 12 hours streaming (at 50% volume). Max volume gives you 4,5 hours streaming.)
- Charges in 4 hours
- Output power: 2x15W (30W)
- 2x3" Full range drivers, 2x1" tweeters
- Class D amplifier
- LED indicator
- USB plug with 5V 1A output for mobile phone charging, 3,5mm AUX input jack, DC jack
- Measurements: 310 x 160 x 80 mm
- Weight: 2153 g
- AC/DC adapter included, AC230 ~50Hz with VDE plug
- Changeable front
- Free app available in App Store and Google Play



The Spotify software is subject to third party licenses found here: www.spotify.com/connect/third-party-licenses.

SACK^{it}®